



MINI AIRPLANE RADAR

QUICK START

3 STEPS | NO APP REQUIRED


Use your phone's Wi-Fi settings and normal web browser.



1

POWER ON

Connect a 5 V USB-C power source. Wait for the POLYFORM and Qatar startup screens.

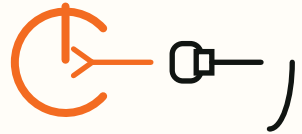


2

JOIN SETUP WI-FI

Choose the network below. No password. If warned No Internet, stay connected.

POLYFORM Airplane Radar

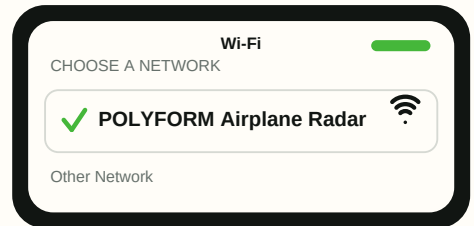


3

FINISH SETUP

The page usually opens automatically. Choose home Wi-Fi, location and display options, then tap Save and connect.

PAGE DID NOT OPEN?
<http://192.168.4.1>

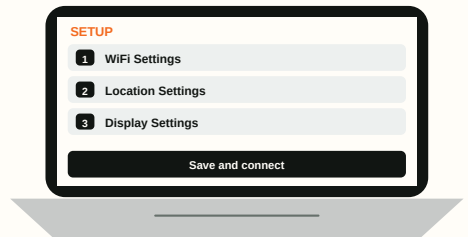

SETTINGS (SAME HOME WI-FI)

<http://polyform-radar.local>



BOOT BUTTON

Tap: range | Hold 3 sec: erase settings

POWER. CONNECT. FLY.